

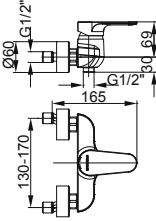
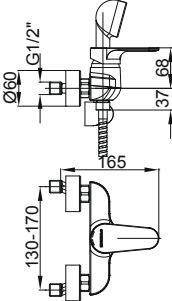
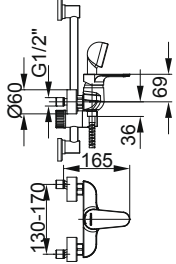


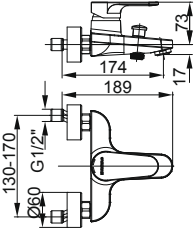
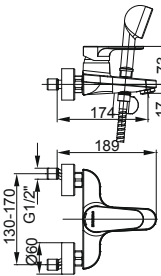
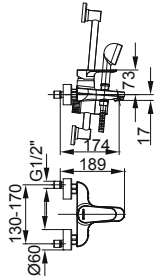


# Infinity Sanitary Armatures

 	 <p>UH00014 chromium;</p>	 <p>UH00012 chromium, upper part of siphon</p>	 <p>UH00013 chromium, angle-body valves</p>
	 <p>UH00003 chromium, angle-body valves</p>		 <p>UH01012 chromium, low pressure version</p>
 	 <p>UH00004 chromium;</p>	 <p>UH00001 chromium; upper part of siphon, siphon, angle-body valves</p>	 <p>UH00002 chromium, upper part of siphon</p>
 	 <p>UH00501 chromium; upper part of siphon</p>	 <p>UH00503 chromium;</p>	

 	 <p>UH00401 chromium</p>	 <p>UH00402 chromium; wall holder, shower tube, shower head</p>	 <p>UH00403 chromium; console, shower tube, shower head</p>
 	 <p>UH00301 chromium</p>	 <p>UH00302 chromium; wall holder, shower tube, shower head</p>	 <p>UH00303 chromium; console, shower tube, shower head</p>

Built-in Material

Housing:	brass acc. to EN 1982, nickel-/chromium-plated
Cartridge:	EU ceramic cartridge, KTW
Handle:	Zamak 0410, chromium-plated
Connecting pipe:	2 pcs. flexible connecting pipe, G3/8 " DWGW
Mounting hole:	Ø 35 mm diameter

Specification

Recommended pressure range:	3 to 5 bar
Maximum pressure:	up to 8 bar
Recommended temperature range:	5 °C – 65 °C
Maximum temperature:	80°C
Flow at 3 bar operating pressure:	<ul style="list-style-type: none"> <li>• mixer battery for washing basin    appr. 6 l/min</li> <li>• mixer battery for bath tub            appr. 20 l/min</li> </ul>
Noise class:	<ul style="list-style-type: none"> <li>• mixer battery for washing basin    class I</li> <li>• mixer battery for bathtub            class II</li> </ul>

Mounting And Maintenance

Flush all water feeding tubes thoroughly before installation.

Connect the sanitary armature to the water supply outlets by means of flexible tubes. Unscrew the pearlator obligatorily and connect the sanitary armature in the fully open position. Open the water valves slowly and move the armature handle to all positions. A longer lasting flushing of the armature is warmly recommended after mounting so as to remove possible impurities. Any repairs shall be performed by adequately skilled personnel only.

With operating pressures over 5 bar, a pressure reducing valve shall always be fitted to the water supply tube.